
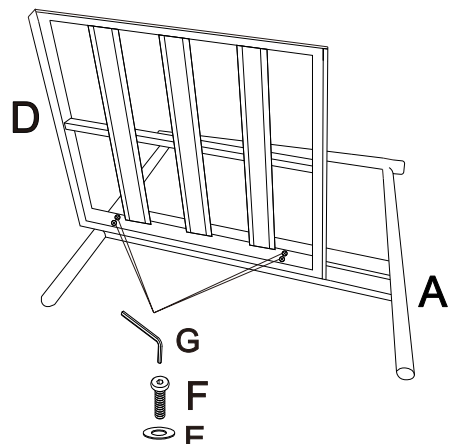
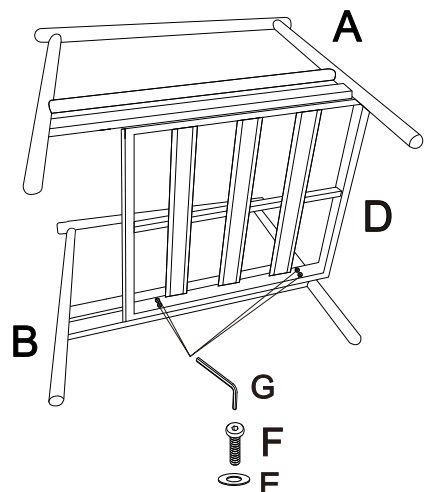




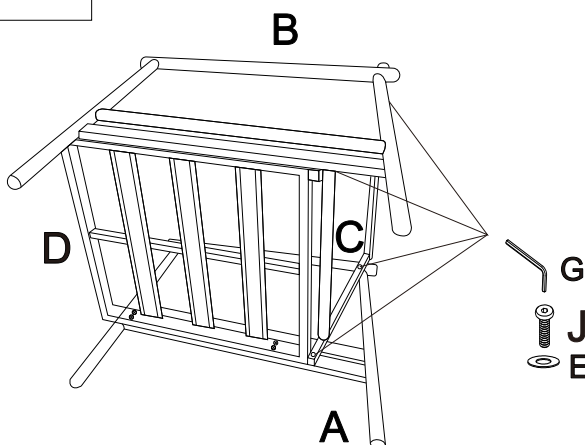
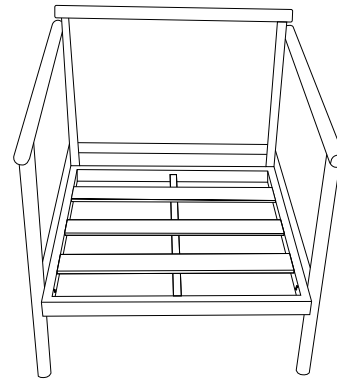






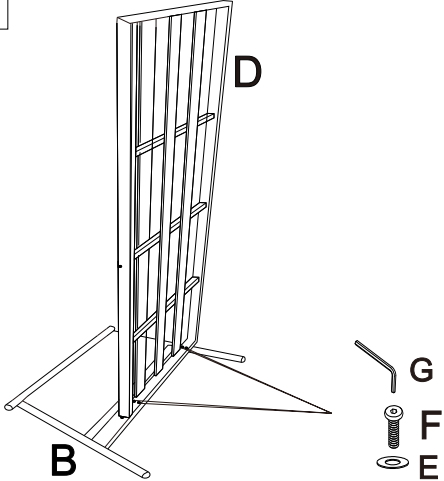
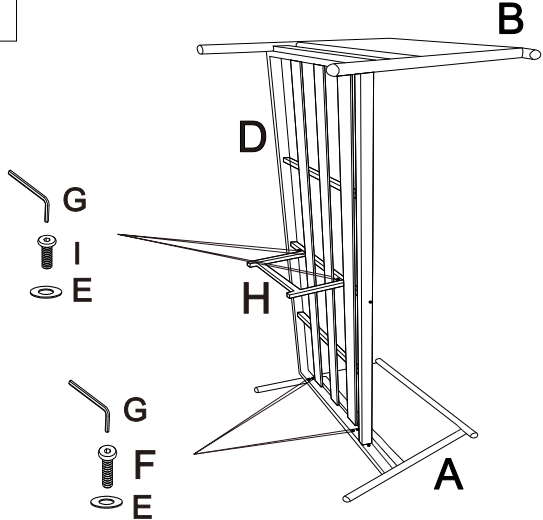





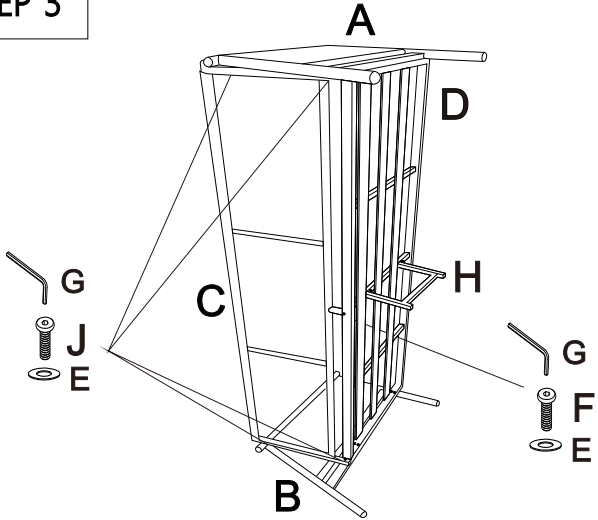
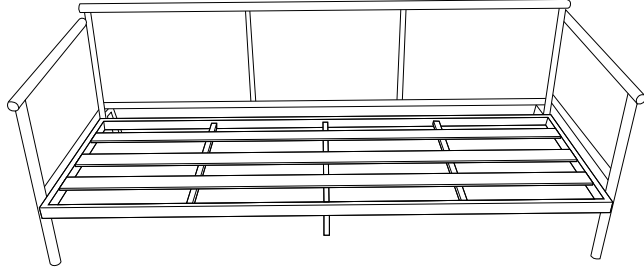




# Assembly Instruction

**Please fix the screws to the holes first and do not tighten them.  
Wait until all screws are secured before tightening**

A		1	Right Armrest	STEP 1		STEP 2	
B		1	Left Armrest				
C		1					
D		1					
E		12		STEP 3		STEP 4	
F	 M6*35	8					
J	 M6*45	4					
G		1					


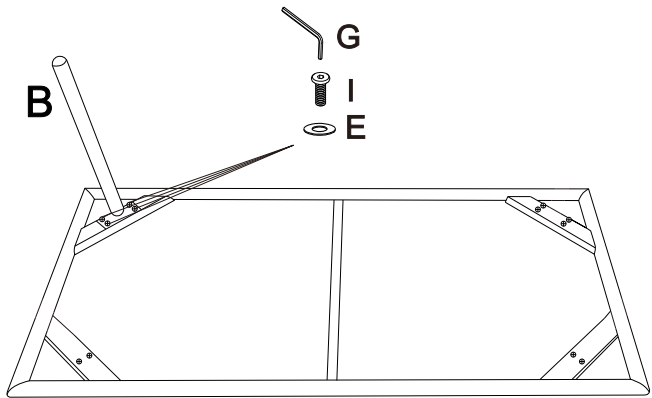
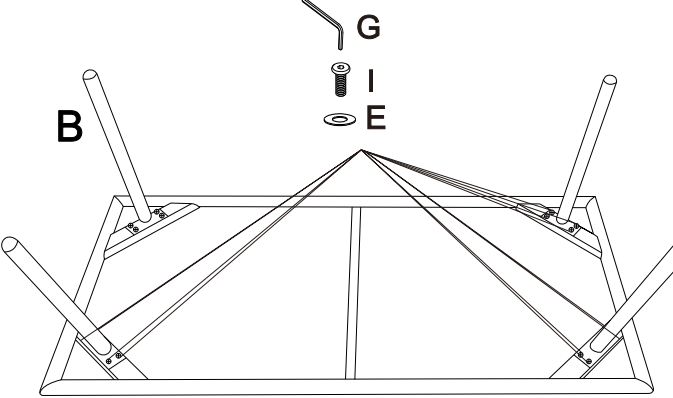





# Assembly Instruction

**Please fix the screws to the holes first and do not tighten them.  
Wait until all screws are secured before tightening**

<b>A</b>		1	Right Armrest	<b>STEP 1</b>		<b>STEP 2</b>	
<b>B</b>		1	Left Armrest				
<b>C</b>		1					
<b>D</b>		1					
<b>H</b>		1					
<b>E</b>		17		<b>STEP 3</b>		<b>STEP 4</b>	
<b>F</b>	 M6*35	9					
<b>J</b>	 M6*45	4					
<b>I</b>	 M6*15	4					
<b>G</b>		1					

# Assembly Instruction

**Please fix the screws to the holes first and do not tighten them.  
Wait until all screws are secured before tightening**

<b>A</b>		<b>1</b>		<div style="border: 1px solid black; padding: 2px; display: inline-block;">STEP 1</div> 	<div style="border: 1px solid black; padding: 2px; display: inline-block;">STEP 2</div> 
<b>B</b>		<b>1</b>			
<b>C</b>		<b>1</b>			
<b>E</b>		<b>16</b>			
<b>I</b>	 <b>M6*15</b>	<b>16</b>		<div style="border: 1px solid black; padding: 2px; display: inline-block;">STEP 3</div>	
<b>G</b>		<b>1</b>			
				